

HaulPass V60s™

Gigabit Ethernet Wireless Link



TECH NOTE

HaulPass V60s IP and Password Restore

This Tech Note describes how to restore your HaulPass V60s to the factory default IP address and password. This process is most easily accomplished at a desk, but can also be completed at the installed location.

First, connect the “POE Injector Out” to Port 1 of the HaulPass V60s (black cable in photo below) and connect the “POE Injector In” to Port 2 of the V60s. This creates a loopback through the POE. Note that this procedure cannot be completed through a switch.



Once configured as shown below, power cycle the V60s by power cycling the POE injector.




Wait a full two minutes. Then, without powering down, take the blue cable (the cable that was feeding Port 2) and connect it directly to a PC. At this point the IP address will be 192.168.66.2.



The login will now be “admin” with no password. You can now change the IP address and other network settings. Once complete, save your settings twice when on the relevant page and also in Maintenance > Configuration > Save startup-config. Note that once you change the IP address, you will need to login again with the new IP address before you can save the configuration. During this time, do not shut off power.

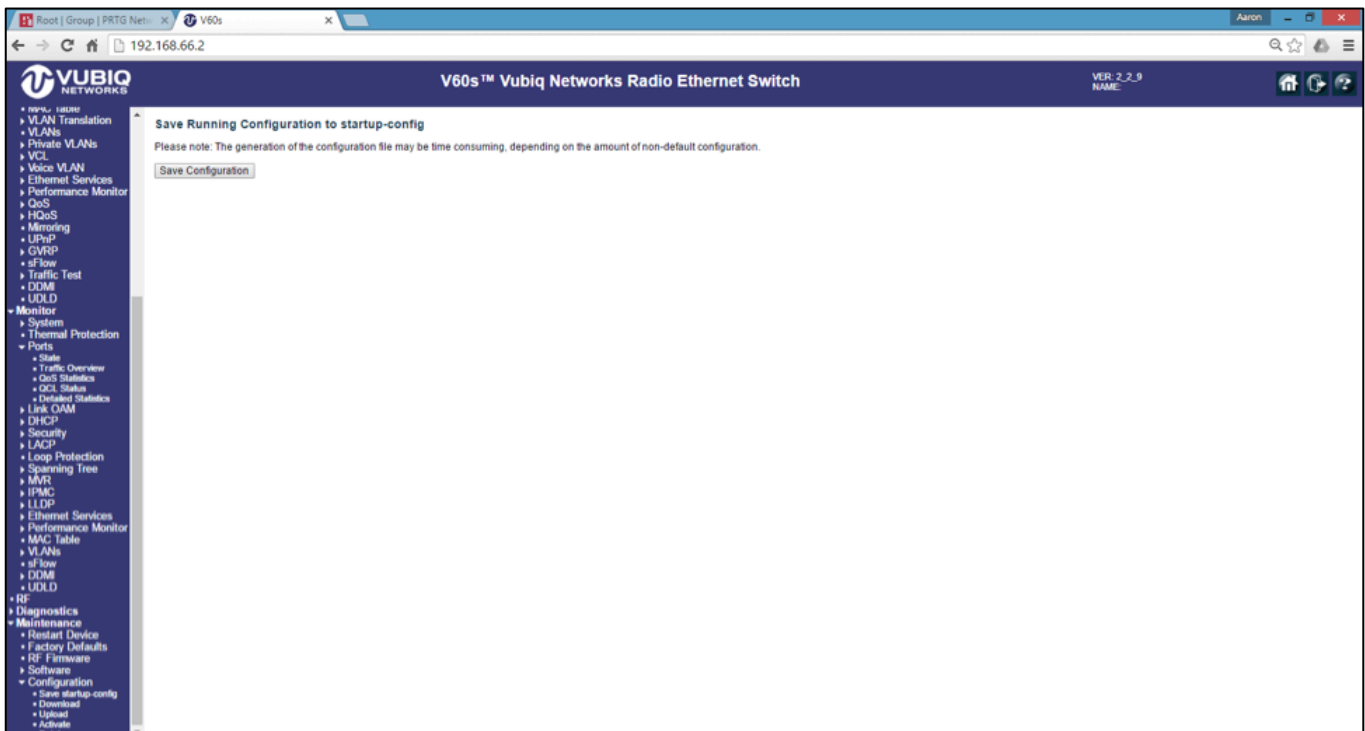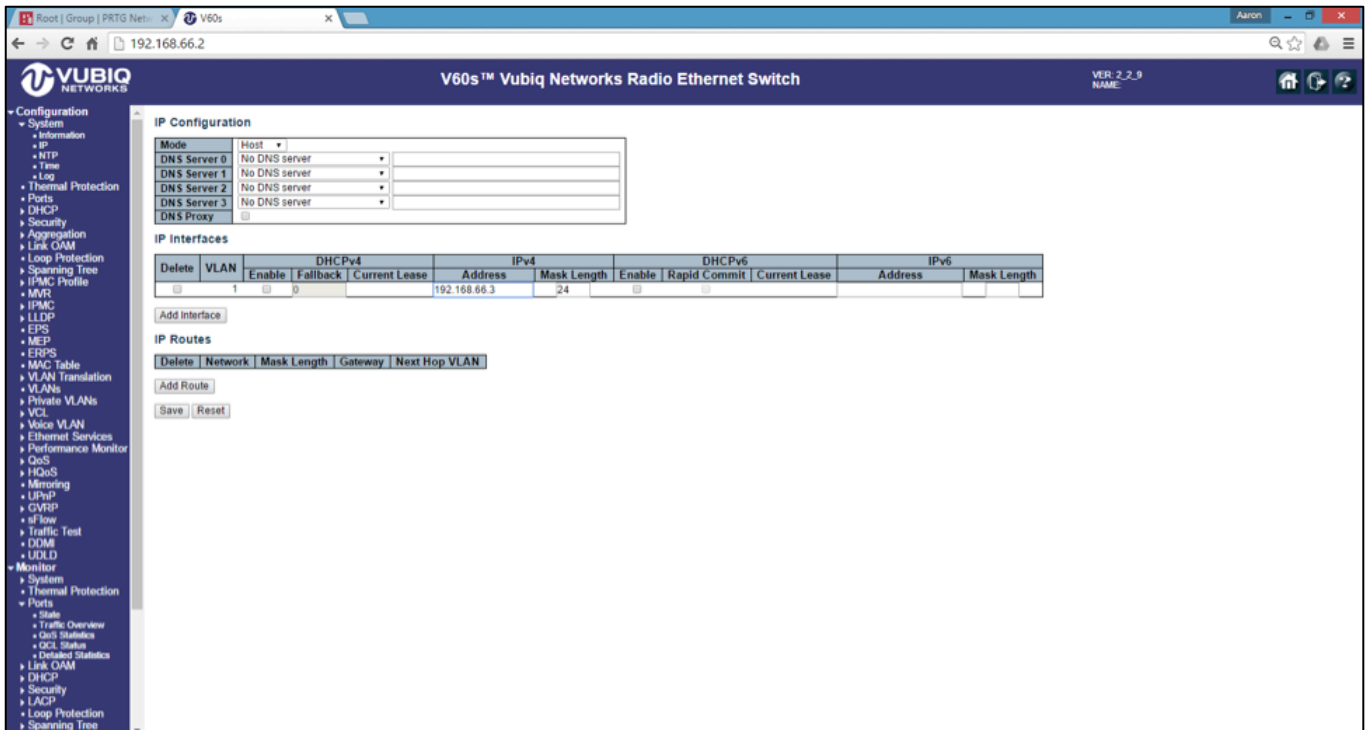

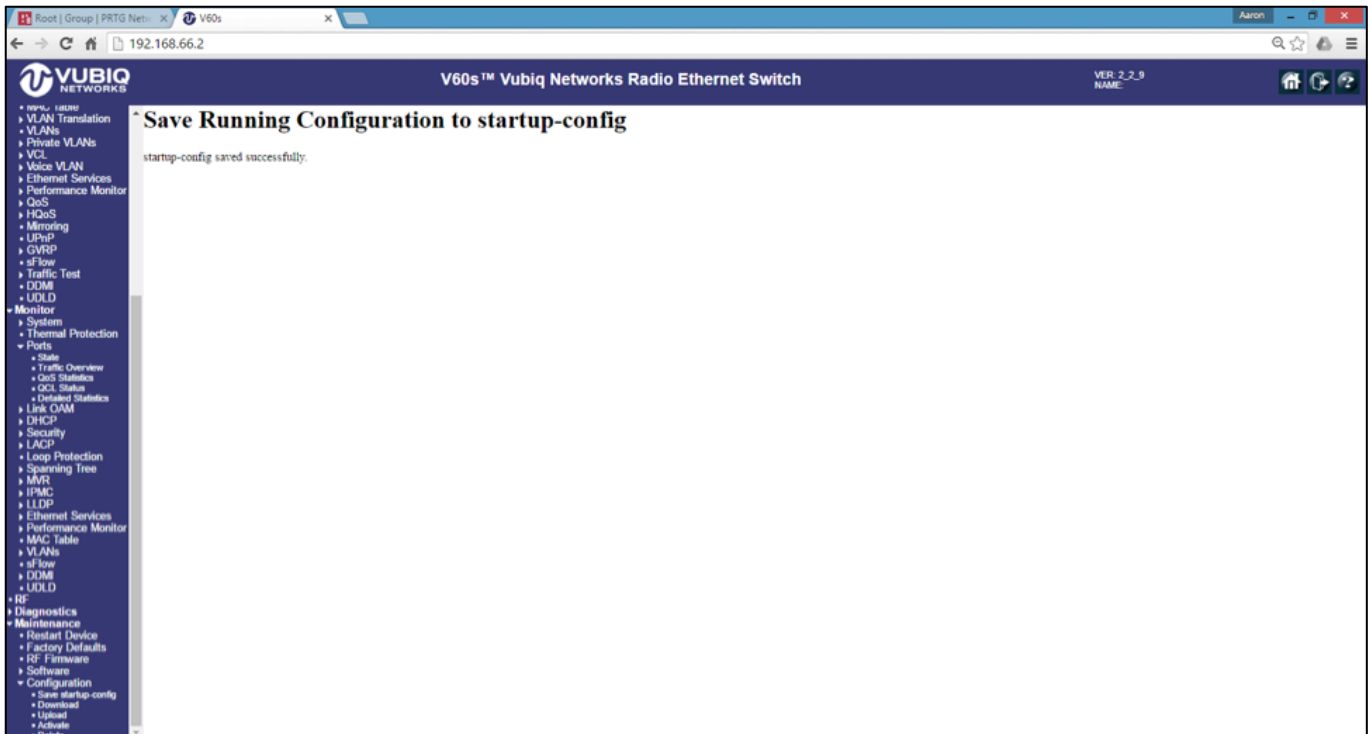

Making V-Band Ubiquitous

Vubiq Networks, Inc.
9231 Irvine Blvd, Irvine, CA 92618 USA
www.vubiqnetworks.com